

**FORNI LINEA START BIG  
START BIG LINE OVENS**

Forno elettrico meccanico  
Facciata in acciaio inox e corpo  
verniciato

Mechanical electric oven  
Stainless steel front side and  
painted steel body



**Il forno elettrico linea START BIG ideale per pizzeria e rosticceria.**

Il forno START BIG è un forno semplice e integrato per ottenere il massimo delle prestazioni con un ottimo prezzo.  
costruito in acciaio inox e in lamiera preverniciata.  
Piano di cottura in pietra refrattaria.  
Isolamento in lana di roccia evaporata.  
Resistenze corazzate.  
Illuminazione interna.  
Alimentazione: Volt 230 - Volt 400 Trifase + neutro (a richiesta voltaggi speciali).

**The electric oven START BIG line is ideal for pizza and rost foods.**


Start BIG oven is a basic oven, conceived to obtain the best performances with a good price l  
it is made in stainless steel and coated metal sheet.  
Firestone cooking top.  
Evaporated mineral wool insulation  
Armored resistances. Interior lighting.  
Power: 230V, 400V three-phase + neutral (Special voltages on request).





## SCHEDA TECNICA FORNI LINEA START BIG

### START BIG LINE OVENS DATASHEETS

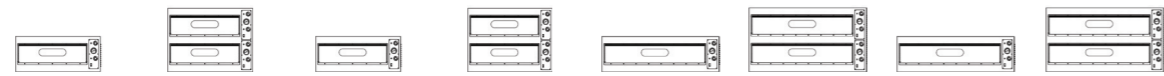

	START 4 BIG	START 44 BIG	START 6 BIG	START 66 BIG	START 9 BIG	START 99 BIG	START 6 BIG/L	START 66BIG/L
	L P H	L P H	L P H	L P H	L P H	L P H	L P H	L P H
<b>DIMENSIONI INTERNE cm</b> INSIDE DIMENSIONS Inch	<b>72 72 14</b> 28.3 28.3 5.5	<b>72 72 14(x2)</b> 28.3 28.3 5.5(x2)	<b>72 108 14</b> 28.3 42.5 5.5	<b>72 108 14(x2)</b> 28.3 42.5 5.5(x2)	<b>108 108 14</b> 42.5 42.5 5.5	<b>108 108 14(x2)</b> 42.5 42.5 5.5(x2)	<b>108 72 14</b> 42.5 28.3 5.5	<b>108 72 14(x2)</b> 42.5 28.3 5.5(x2)
<b>DIMENSIONI ESTERNE cm</b> OUTSIDE DIMENSIONS Inch	<b>96 98 40</b> 37.7 38.5 15.7	<b>96 98 71</b> 37.7 38.5 27.9	<b>96 134 40</b> 37.7 52.7 15.7	<b>96 134 71</b> 37.7 52.7 27.9	<b>132 134 40</b> 51.9 52.7 15.7	<b>132 134 75</b> 51.9 52.7 29.5	<b>132 98 40</b> 51.9 38.5 15.7	<b>132 98 75</b> 51.9 38.5 29.5
<b>DIMENSIONI IMBALLO cm</b> PACKAGE DIMENSIONS Inch	<b>97 100 56</b> 38.1 39.3 22	<b>97 100 88</b> 38.1 39.3 34.6	<b>97 140 56</b> 38.1 55.1 22	<b>97 140 88</b> 38.1 55.1 34.6	<b>133 135 56</b> 52.3 53.1 22	<b>133 135 88</b> 52.3 53.1 34.6	<b>133 99 56</b> 52.3 38.9 22	<b>133 99 88</b> 52.3 38.9 34.6
<b>CAMERA COTTURA n°</b> BAKING CHAMBER n°	<b>1</b>	<b>2</b>	<b>1</b>	<b>2</b>	<b>1</b>	<b>2</b>	<b>1</b>	<b>2</b>
<b>POTENZA Kw</b> POWER Kw	<b>6.0</b>	<b>12</b>	<b>9.0</b>	<b>18.0</b>	<b>13.0</b>	<b>26.4</b>	<b>9.0</b>	<b>18.0</b>
<b>VOLT</b>	<b>230/400</b>	<b>230/400</b>	<b>400</b>	<b>400</b>	<b>400</b>	<b>400</b>	<b>230/400</b>	<b>230/400</b>
<b>TEMPERATURA C°</b> TEMPERATURE C°	<b>50/500°</b>	<b>50/500°</b>	<b>50/500°</b>	<b>50/500°</b>	<b>50/500°</b>	<b>50/500°</b>	<b>50/500°</b>	<b>50/500°</b>
<b>PESO Kg</b> WEIGHT Kg	<b>94</b>	<b>149</b>	<b>122</b>	<b>199</b>	<b>150</b>	<b>279</b>	<b>122</b>	<b>199</b>
<b>TOTALE PIZZE Ø 36 cm</b> TOTAL PIZZA Ø 36 CM								
<b>N° TEGLIE 60X40 cm</b> N° OF PANS 60X40 cm	<b>1</b>	<b>2</b>	<b>2</b>	<b>4</b>	<b>3</b>	<b>6</b>	<b>2</b>	<b>4</b>
<b>CODICE CODE</b>	<b>7020121004B</b>	<b>7020121044B</b>	<b>7020121006B</b>	<b>7020121066B</b>	<b>7020121009B</b>	<b>7020121099B</b>	<b>7020121006BL</b>	<b>7020121066BL</b>

## SCHEDA TECNICA ACCESSORI LINEA START BIG

### START BIG LINE ACCESSORIES DATASHEETS



	REFRATTARI CIELO-PLATEA TOP AND BOTTOM REFRACTORY BRICKS	CODICE CODE
	4BIG	7020140001
44BIG	7020140002	
6BIG	7020140003	
66BIG	7020140004	
9BIG	7020140005	
99BIG	7020140006	
6BIG L	7020140007	
66BIG L	7020140008	

# SCHEDA TECNICA ACCESSORI LINEA START BIG

## START BIG LINE ACCESSORIES DATASHEETS

		DIMENSIONI <b>cm</b> DIMENSIONS <b>Inch</b> 	DIMENSIONI IMBALLO <b>cm</b> PACKAGE DIMENSIONS <b>Inch</b> 	PESO <b>Kg</b> WEIGHT <b>Kg</b>	OPTIONAL OPTIONAL	CODICE CODE
	<b>CAPPA INOX FORNO 4/44 SB</b> OVENS INOX HOOD 4/44 SB	<b>95 102 11,5</b> 37.4 40.1 4.5	<b>99 106 20</b> 38.9 41.7 7.8	<b>11,00</b>		<b>7020120003</b>
	<b>CAPPA INOX FORNO 6/66 SB</b> OVENS INOX HOOD 6/66 SB	<b>95 138 11,5</b> 37.4 54.3 4.5	<b>99 142 20</b> 38.9 55.9 7.8	<b>13,00</b>		<b>7020120004</b>
	<b>CAPPA INOX FORNO 9/99 SB</b> OVENS INOX HOOD 9/99 SB	<b>131 138 11,5</b> 51.5 54.3 4.5	<b>135 142 20</b> 53.1 55.9 7.8	<b>17,00</b>		<b>7020120005</b>
	<b>CAPPA INOX FORNO 6L/66L SB</b> OVENS INOX HOOD 6L/66L SB	<b>131 102 11,5</b> 51.5 40.1 4.5	<b>135 106 20</b> 53.1 41.7 7.8	<b>13,50</b>		<b>7020120006</b>
	<b>MOTORE ELETTRICO</b> ELECTRIC MOTOR					<b>7020130001</b>
	<b>SUPPORTO START 4BIG</b> SUPPORT START 4BIG	<b>101,6 88,1 96</b> 40 34.6 37.7	<b>105 30 20</b> 41.3 11.8 7.8	<b>25,63</b>	/	<b>7020100005</b>
	<b>SUPPORTO START 44BIG</b> SUPPORT START 44BIG	<b>101,6 88,1 86</b> 40 34.6 33.8	<b>105 30 20</b> 41.3 11.8 7.8	<b>24,68</b>	/	<b>7020100007</b>
	<b>SUPPORTO START 6BIG</b> SUPPORT START 6BIG	<b>101,6 124,1 96</b> 40 48.8 37.7	<b>130 30 20</b> 51.1 11.8 7.8	<b>27,57</b>	/	<b>7020100006</b>
	<b>SUPPORTO START 66BIG</b> SUPPORT START 66BIG	<b>101,6 124,1 86</b> 40 48.8 33.8	<b>130 30 20</b> 51.1 11.8 7.8	<b>29,62</b>	/	<b>7020100008</b>
	<b>SUPPORTO START 9BIG</b> SUPPORT START 9BIG	<b>132,6 124,1 96</b> 52.2 48.8 37.7	<b>140 30 20</b> 55.1 11.8 7.8	<b>35,34</b>	/	<b>7020100009</b>
	<b>SUPPORTO START 99BIG</b> SUPPORT START 99BIG	<b>132,6 124,1 86</b> 52.2 48.8 33.8	<b>140 30 20</b> 55.1 11.8 7.8	<b>34,52</b>	/	<b>7020100010</b>
	<b>SUPPORTO START 6BIG L</b> SUPPORT START 6BIG L	<b>132,6 88,1 96</b> 52.2 34.6 37.7	<b>140 30 20</b> 55.1 11.8 7.8	<b>28,88</b>	/	<b>7020100011</b>
	<b>SUPPORTO START 66BIG L</b> SUPPORT START 66BIG L	<b>132,6 88,1 86</b> 52.2 34.6 33.8	<b>140 30 20</b> 55.1 11.8 7.8	<b>27,93</b>	/	<b>7020100012</b>
	<b>KIT TEGLIE START 4BIG</b> TRAYHOLDER KIT START 4BIG	/	<b>100 30 20</b> 39.3 11.8 7.8	<b>5,80</b>	/	<b>7020110006</b>
	<b>KIT TEGLIE START 44BIG</b> TRAYHOLDER KIT START 44BIG	/	<b>100 30 20</b> 39.3 11.8 7.8	<b>5,50</b>	/	<b>7020110007</b>
	<b>KIT TEGLIE START 6BIG</b> TRAYHOLDER KIT START 6BIG	/	<b>130 30 20</b> 51.1 11.8 7.8	<b>6,88</b>	/	<b>7020110008</b>
	<b>KIT TEGLIE START 66BIG</b> TRAYHOLDER KIT START 66BIG	/	<b>130 30 20</b> 51.1 11.8 7.8	<b>6,58</b>	/	<b>7020110009</b>
	<b>KIT TEGLIE START 9BIG</b> TRAYHOLDER KIT START 9BIG	/	<b>140 30 20</b> 55.1 11.8 7.8	<b>6,88</b>	/	<b>7020110008</b>
	<b>KIT TEGLIE START 99BIG</b> TRAYHOLDER KIT START 99BIG	/	<b>140 30 20</b> 55.1 11.8 7.8	<b>6,58</b>	/	<b>7020110009</b>
	<b>KIT TEGLIE START 6BIG L</b> TRAYHOLDER KIT START 6BIG L	/	<b>140 30 20</b> 55.1 11.8 7.8	<b>5,80</b>	/	<b>7020110006</b>
	<b>KIT TEGLIE START 66BIG L</b> TRAYHOLDER KIT START 66BIG L	/	<b>140 30 20</b> 55.1 11.8 7.8	<b>5,50</b>	/	<b>7020110007</b>
	<b>COPPIA ANGOLARI</b> <b>4BIG - 44BIG - 6BIG L - 66BIG L</b> CORNERS COUPLE 4BIG - 44BIG - 6BIG L - 66 BIG L	/	<b>90 10 10</b> 35.4 3.9 3.9	<b>1,68</b>	/	<b>7020110011</b>
	<b>COPPIA ANGOLARI</b> <b>6BIG - 66BIG - 9BIG - 99BIG</b> CORNERS COUPLE 6BIG - 66BIG - 9BIG - 99BIG	/	<b>130 10 10</b> 51.1 3.9 3.9	<b>2,04</b>	/	<b>7020110013</b>
	<b>KIT RUOTE</b> CASTORS KIT	/	<b>30 20 20</b> 11.8 7.8 7.8	<b>5,00</b>	/	<b>7020110001</b>

